What's in the box?

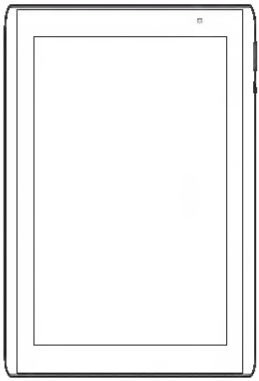

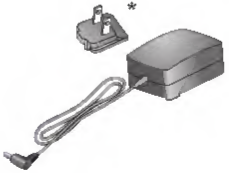

*Configuration may vary by model

Your tablet

No.	Item
1	Docking port
2	Micro (Type D) HDMI port
3	Headphones / speaker jack
4	Power button / resume from sleep
5	Touchscreen
6	2 MP front-facing camera
7	Light sensor

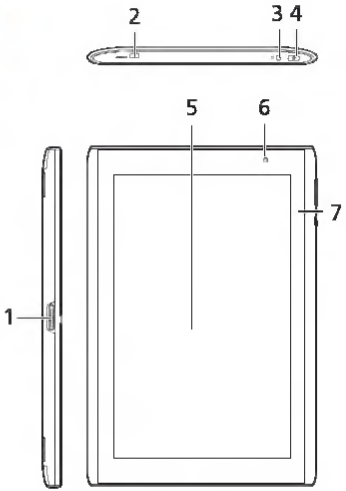

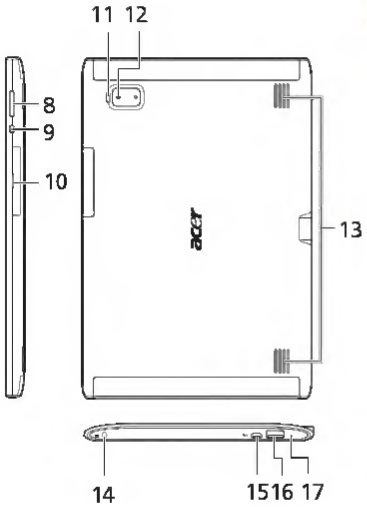

No.	Item
8	Volume control key
9	Screen rotation lock switch
10	SIM* / microSD card slot (* only for certain models)
11	LED flash
12	5 MP rear camera
13	Speakers
14	DC-in jack
15	Micro USB connector (slave)
16	USB connector (host)
17	Reset button

Setting up for the first time

Inserting the microSD card (optional)

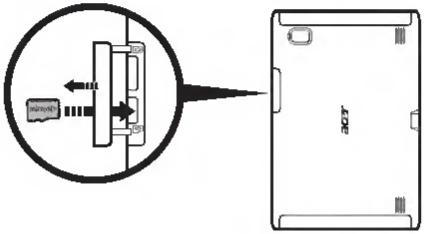

Inserting the SIM card (optional)

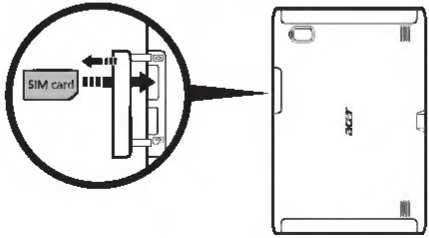

Charging your device

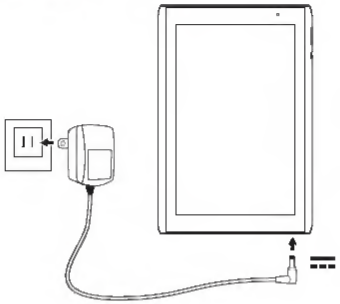

Connecting to a PC

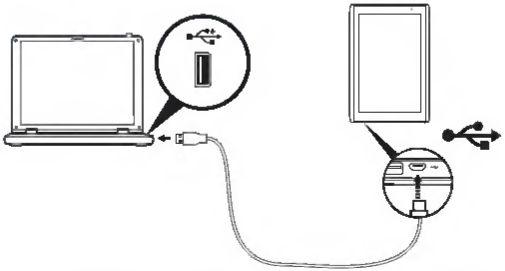

Connecting a USB device

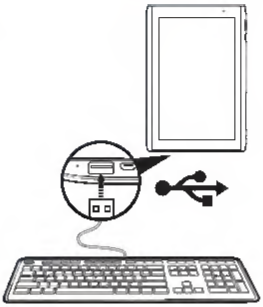

Connecting to a television with HDMI

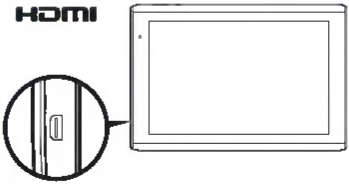

Connecting to the optional dock

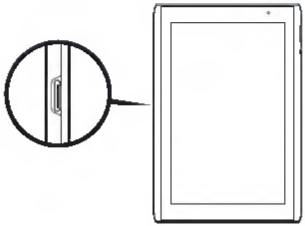

Resetting the device

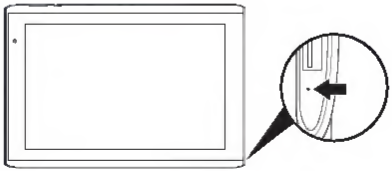

Product information

For detailed product information, please go to http://mobile.acer.com/

I. Go to **www.acer.com** and select your region and country.

II. Click **Support > Download** > Select **Product Family > Tablet**.

III. Select your tablet model.

Intellectual property rights information

© 2011. All Rights Reserved.

Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.